


S-137

Installation instructions

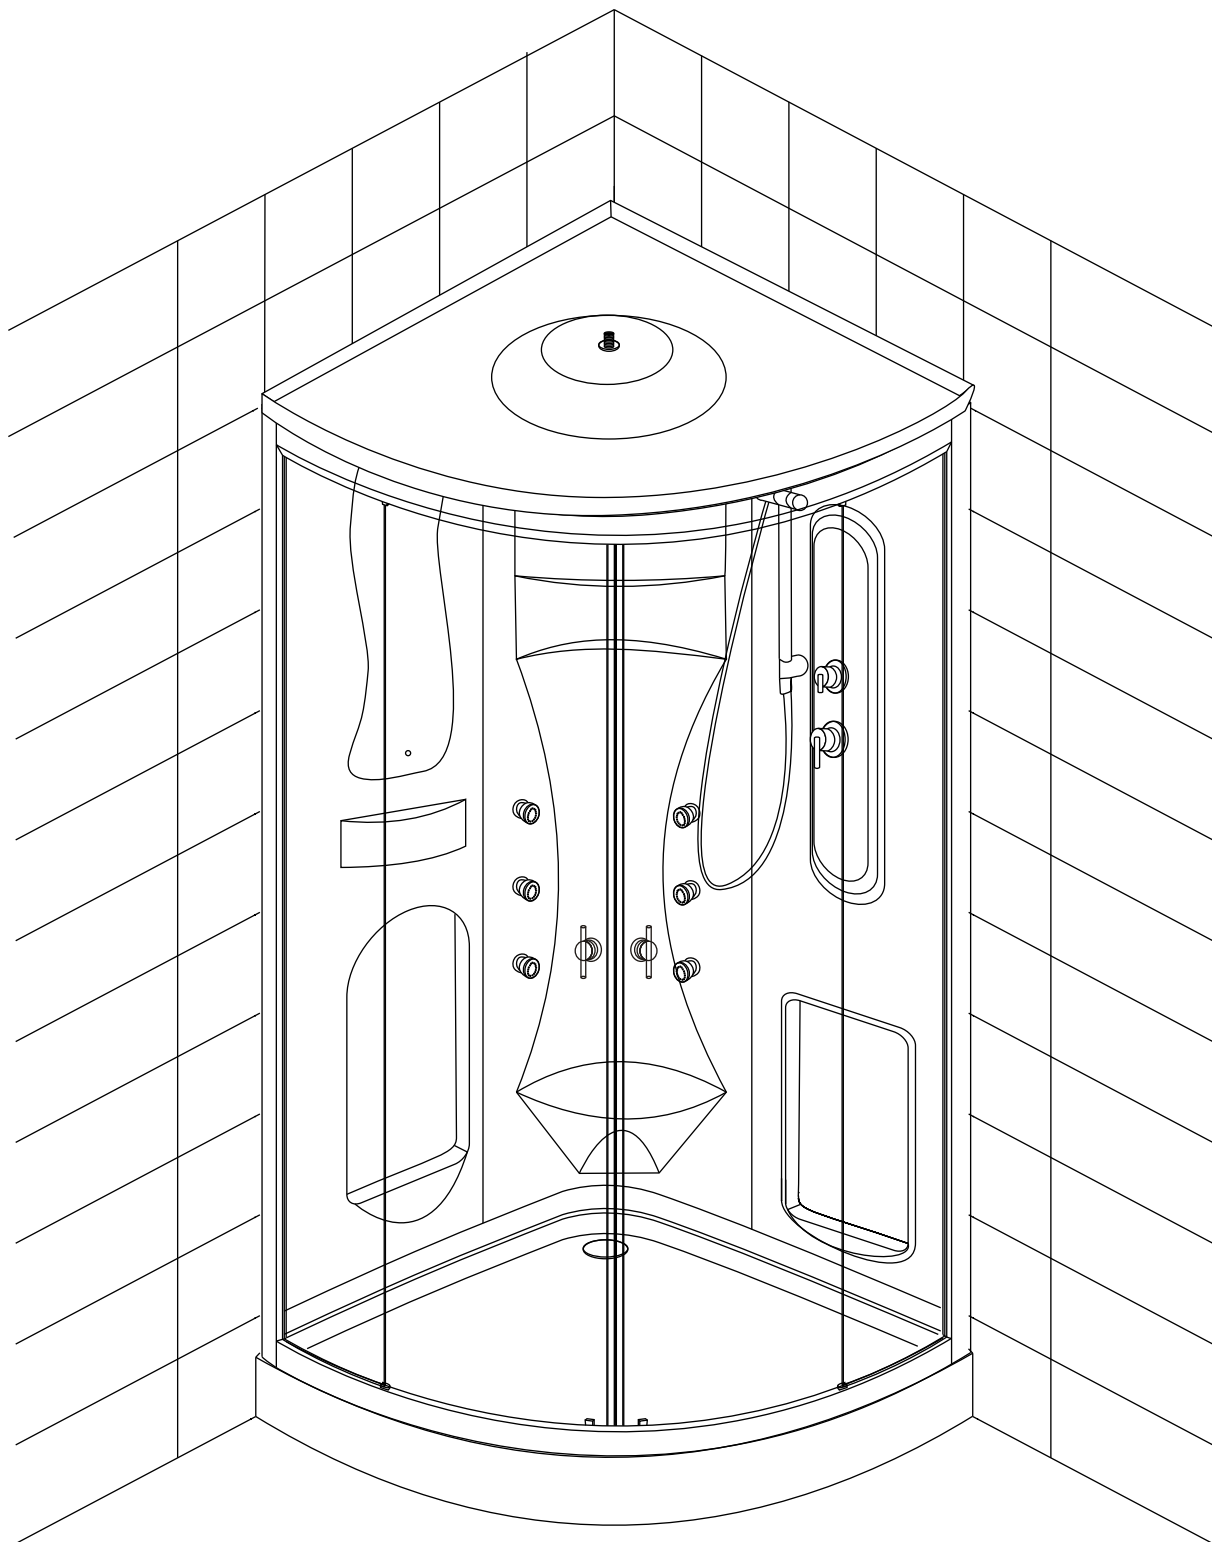

SIZE : 90*90*210 CM


This exploded perspective view illustrates the main components of the corner shower unit. At the top is the top panel (A) with a central drain (B). Below it is the main body (C), which includes a central water outlet (D), a shower head (E), and a control panel (F) with a handle (G) and a button (H). The main body is shown with internal components like the water inlet (I) and the water outlet (J). The bottom panel (E3) is shown below the main body. The side panels (B2, C2, E2) are shown on the left, and the back panel (G3) is shown on the right. The bottom panel (E3) is shown below the main body. The side panels (B2, C2, E2) are shown on the left, and the back panel (G3) is shown on the right. The bottom panel (E3) is shown below the main body. The side panels (B2, C2, E2) are shown on the left, and the back panel (G3) is shown on the right.

Ref	Description	Qty
A2	ARC PROFILE	2
B2	WALL PROFILE	2
C2	FIXED DOOR	2
D2	SLIDINE DOOR	2
E2	VERTICAL SEAL FOR FIXED GLASS	4

2





S-137

Installation instructions

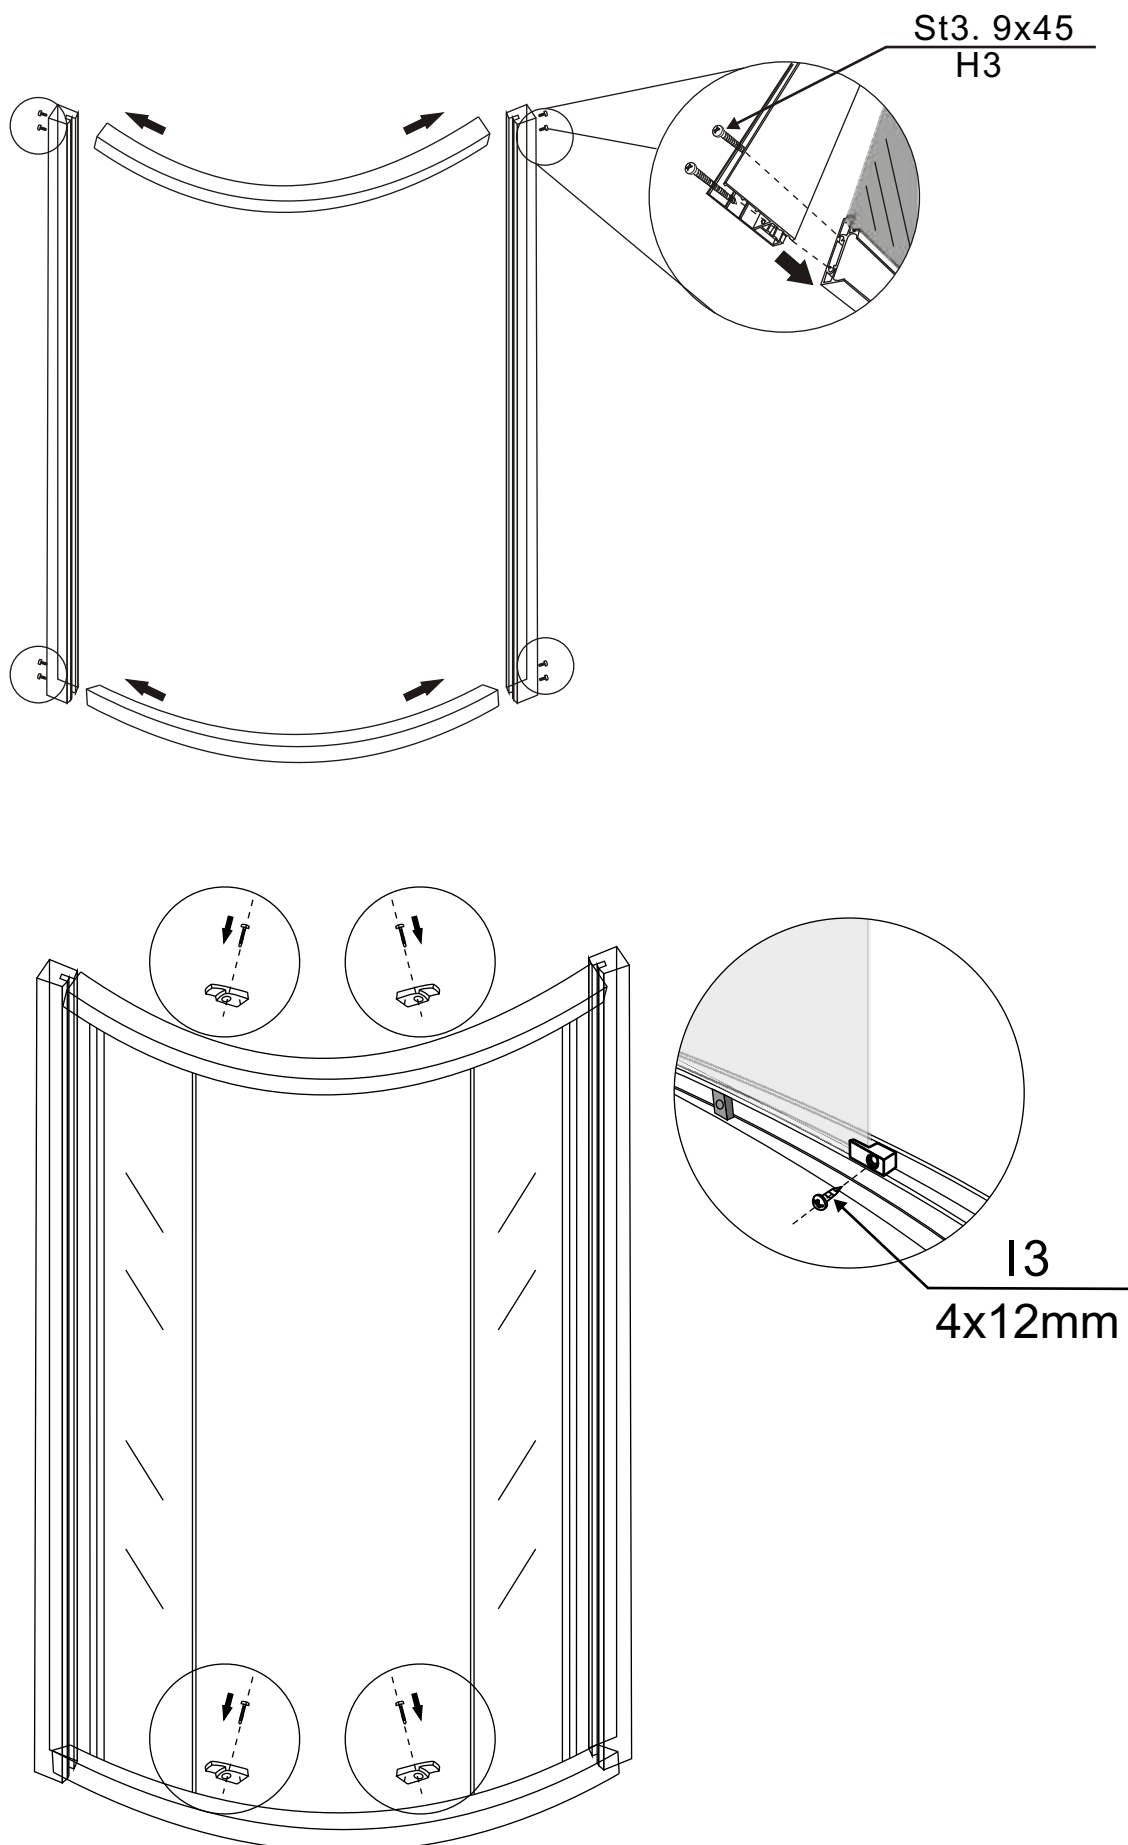


S-137



Installation instructions

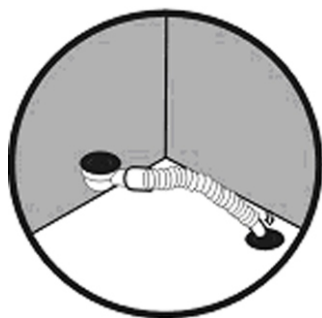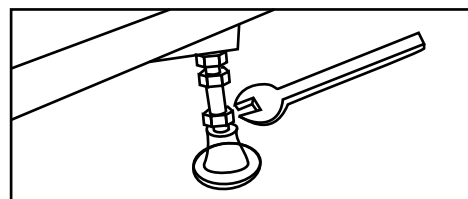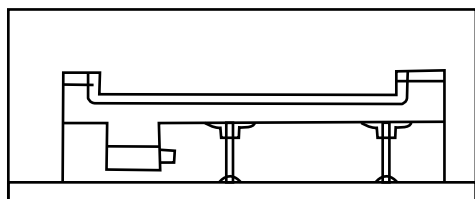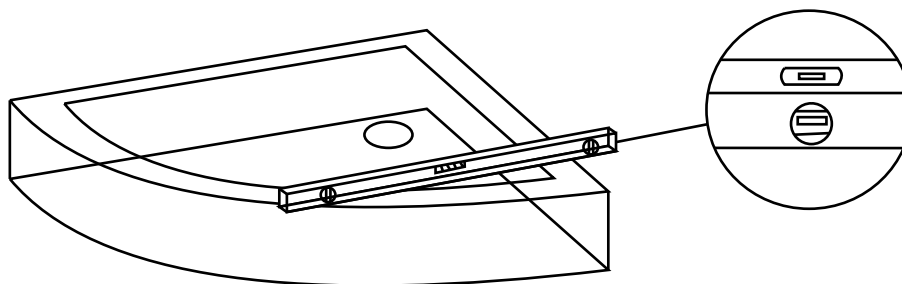

Lift the rear part of bottom basin, and then insert one end of the pipe into the drainage hole

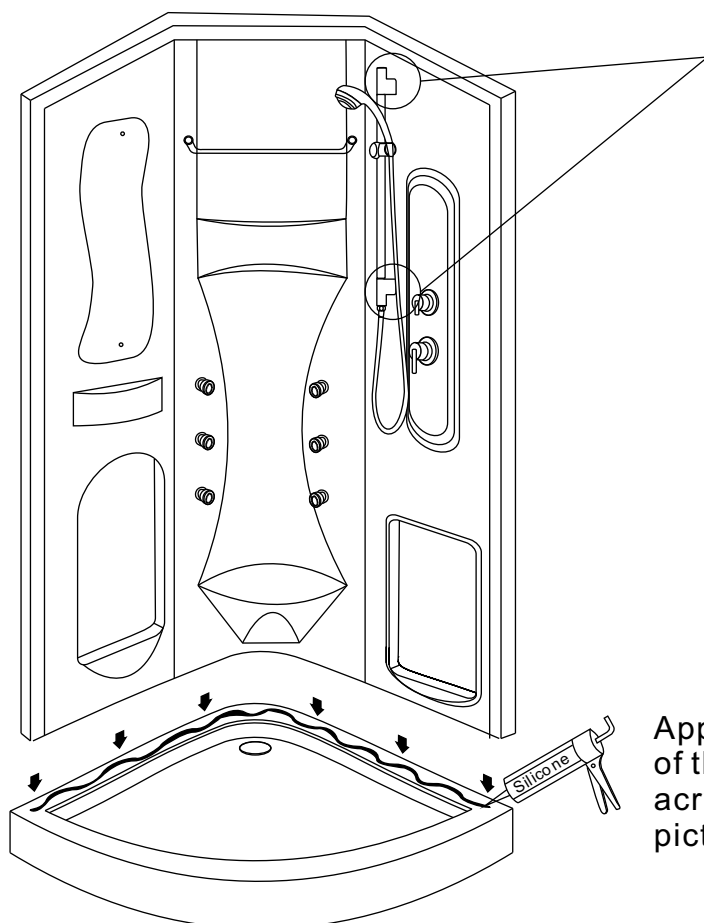



3. 9x16mm

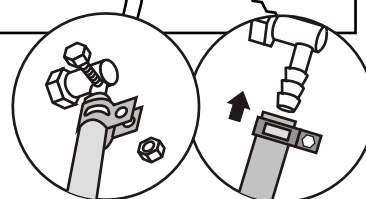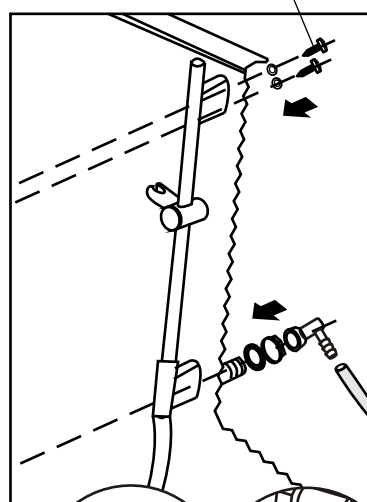

Apply a line of silicone to the back of the shower tray and position the acrylic wall over it as shown in the picture.



S-137

Installation instructions

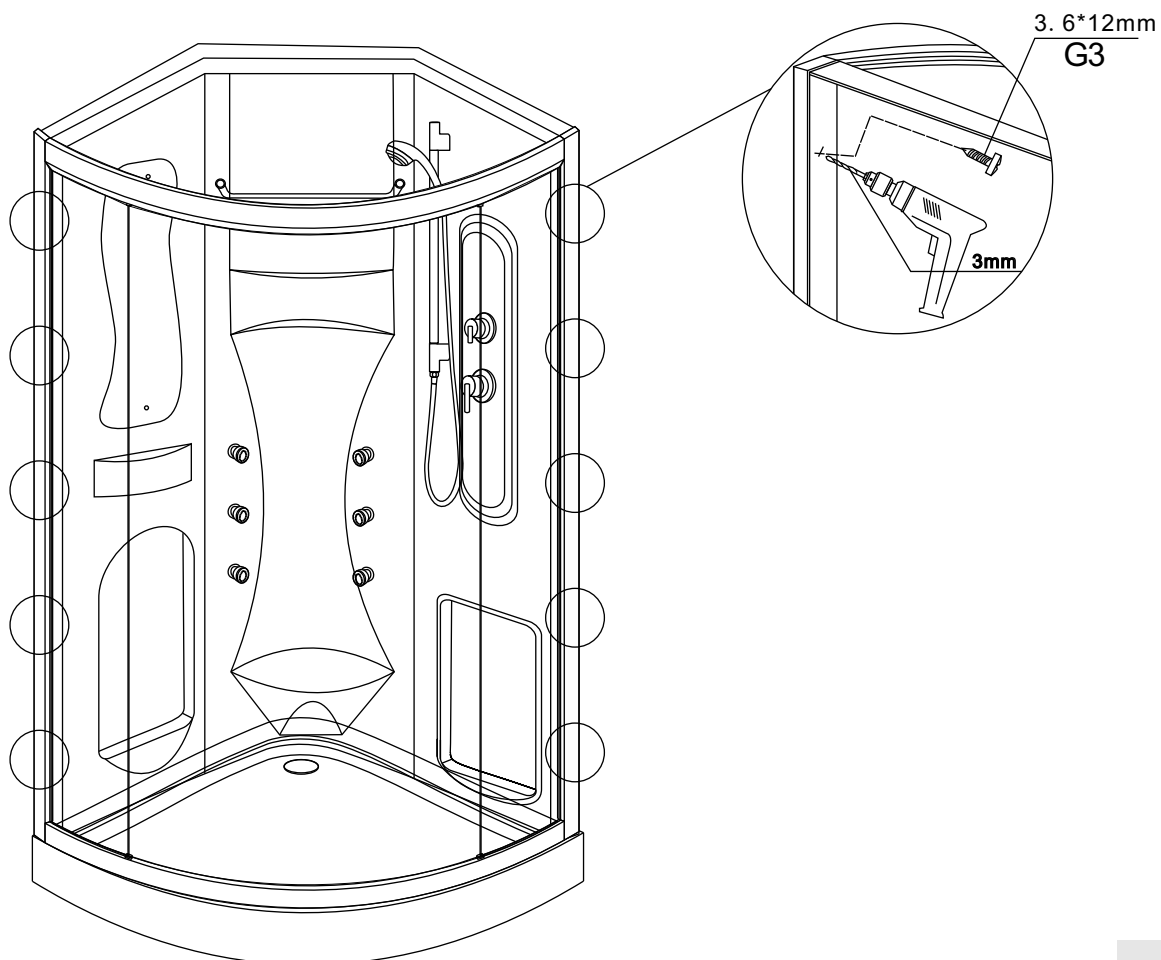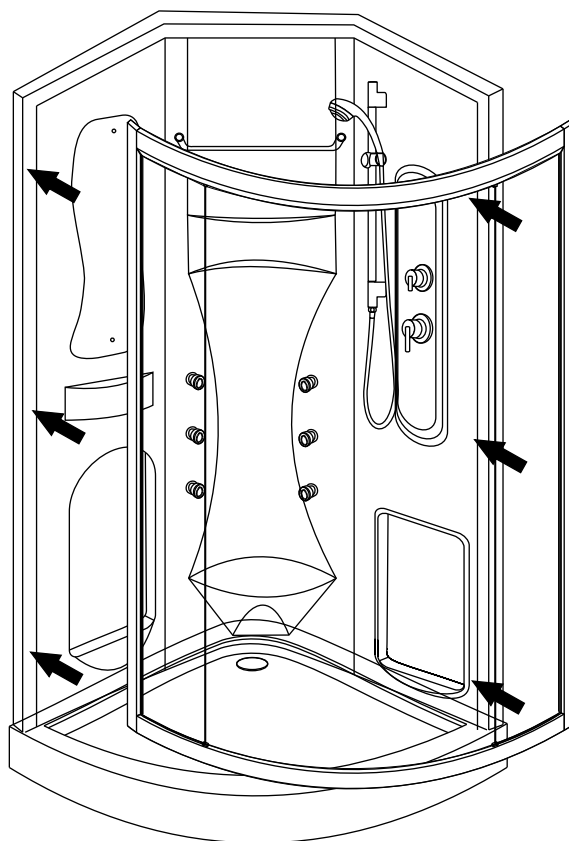




S-137

Installation instructions

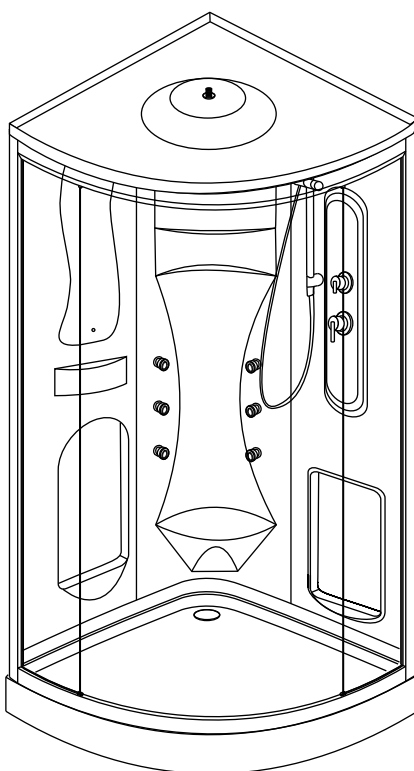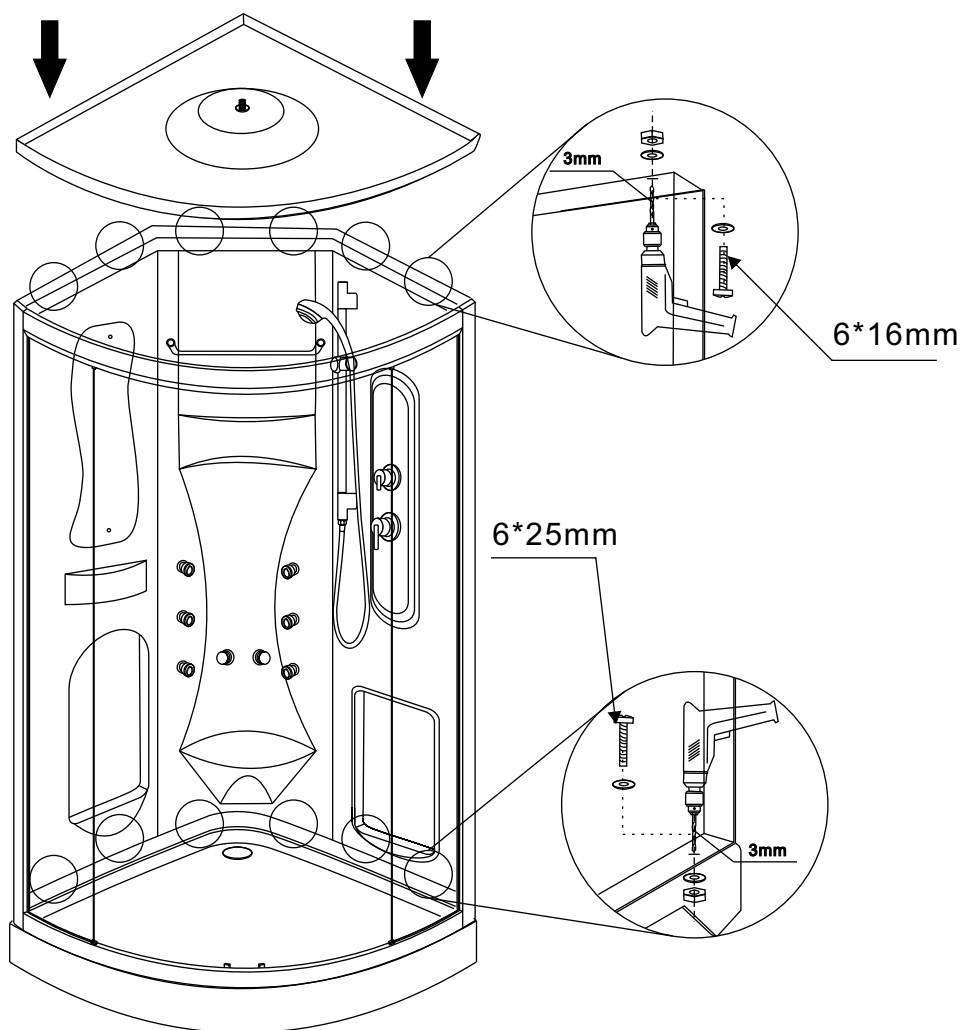





S-137

Installation instructions

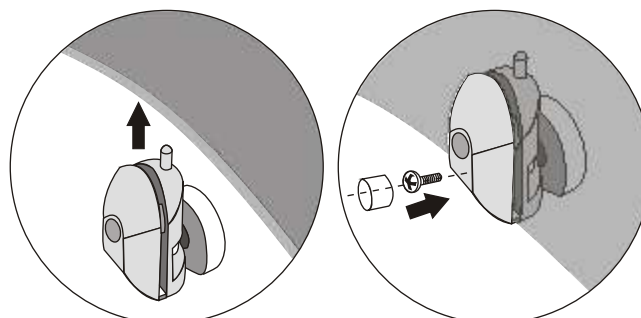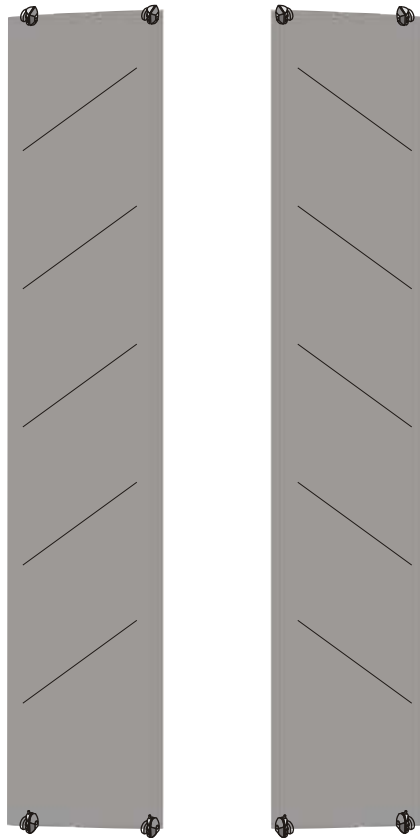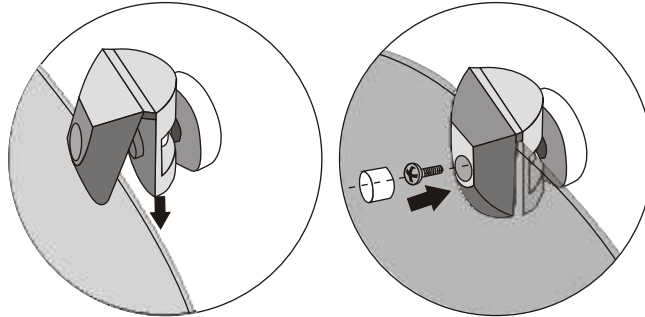


S-137

Installation instructions

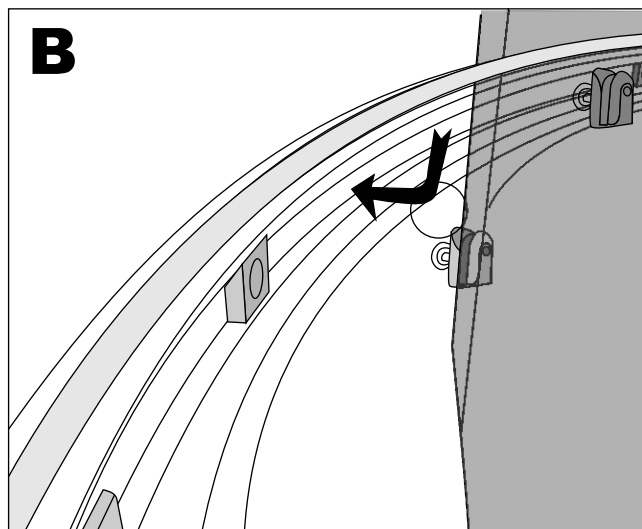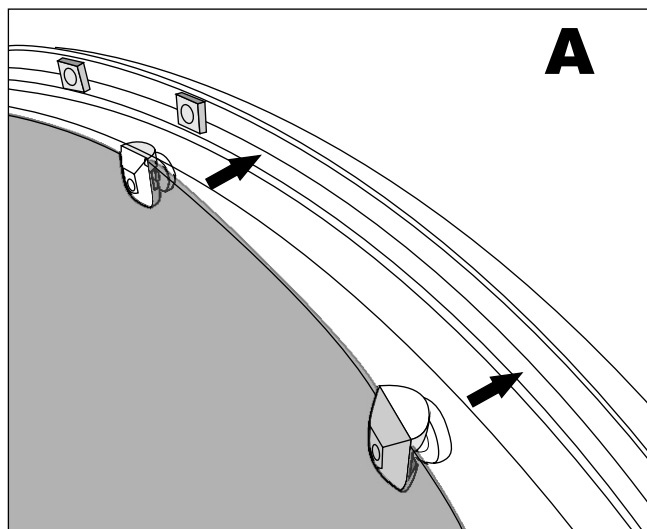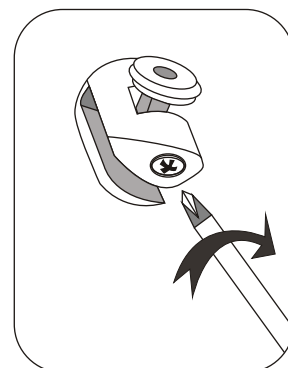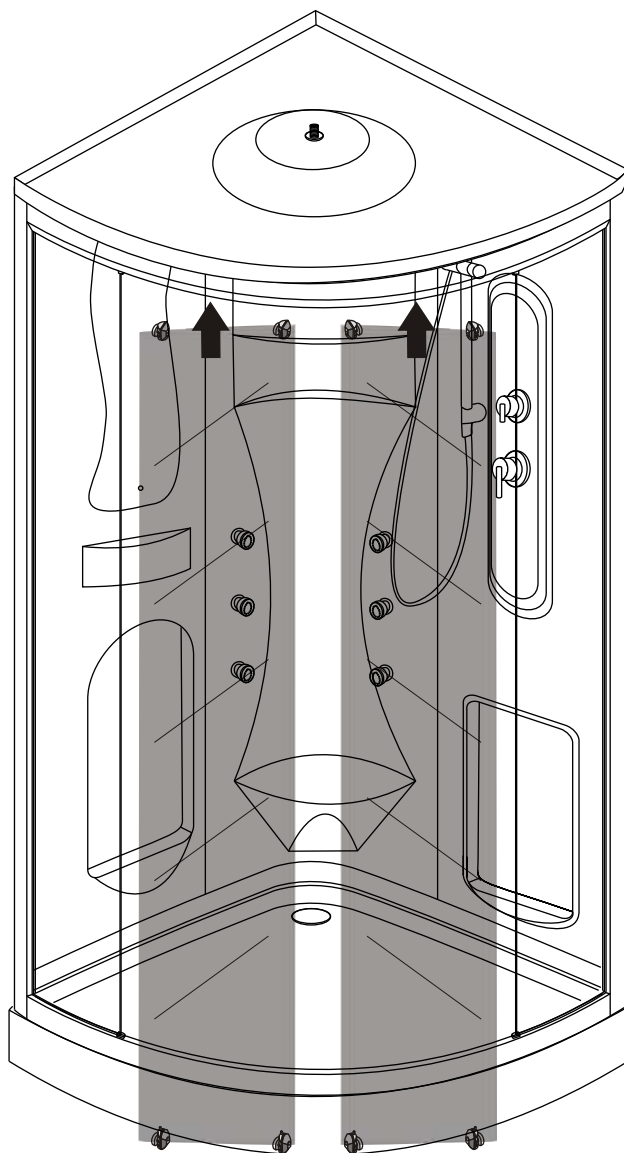

S-137

Installation instructions

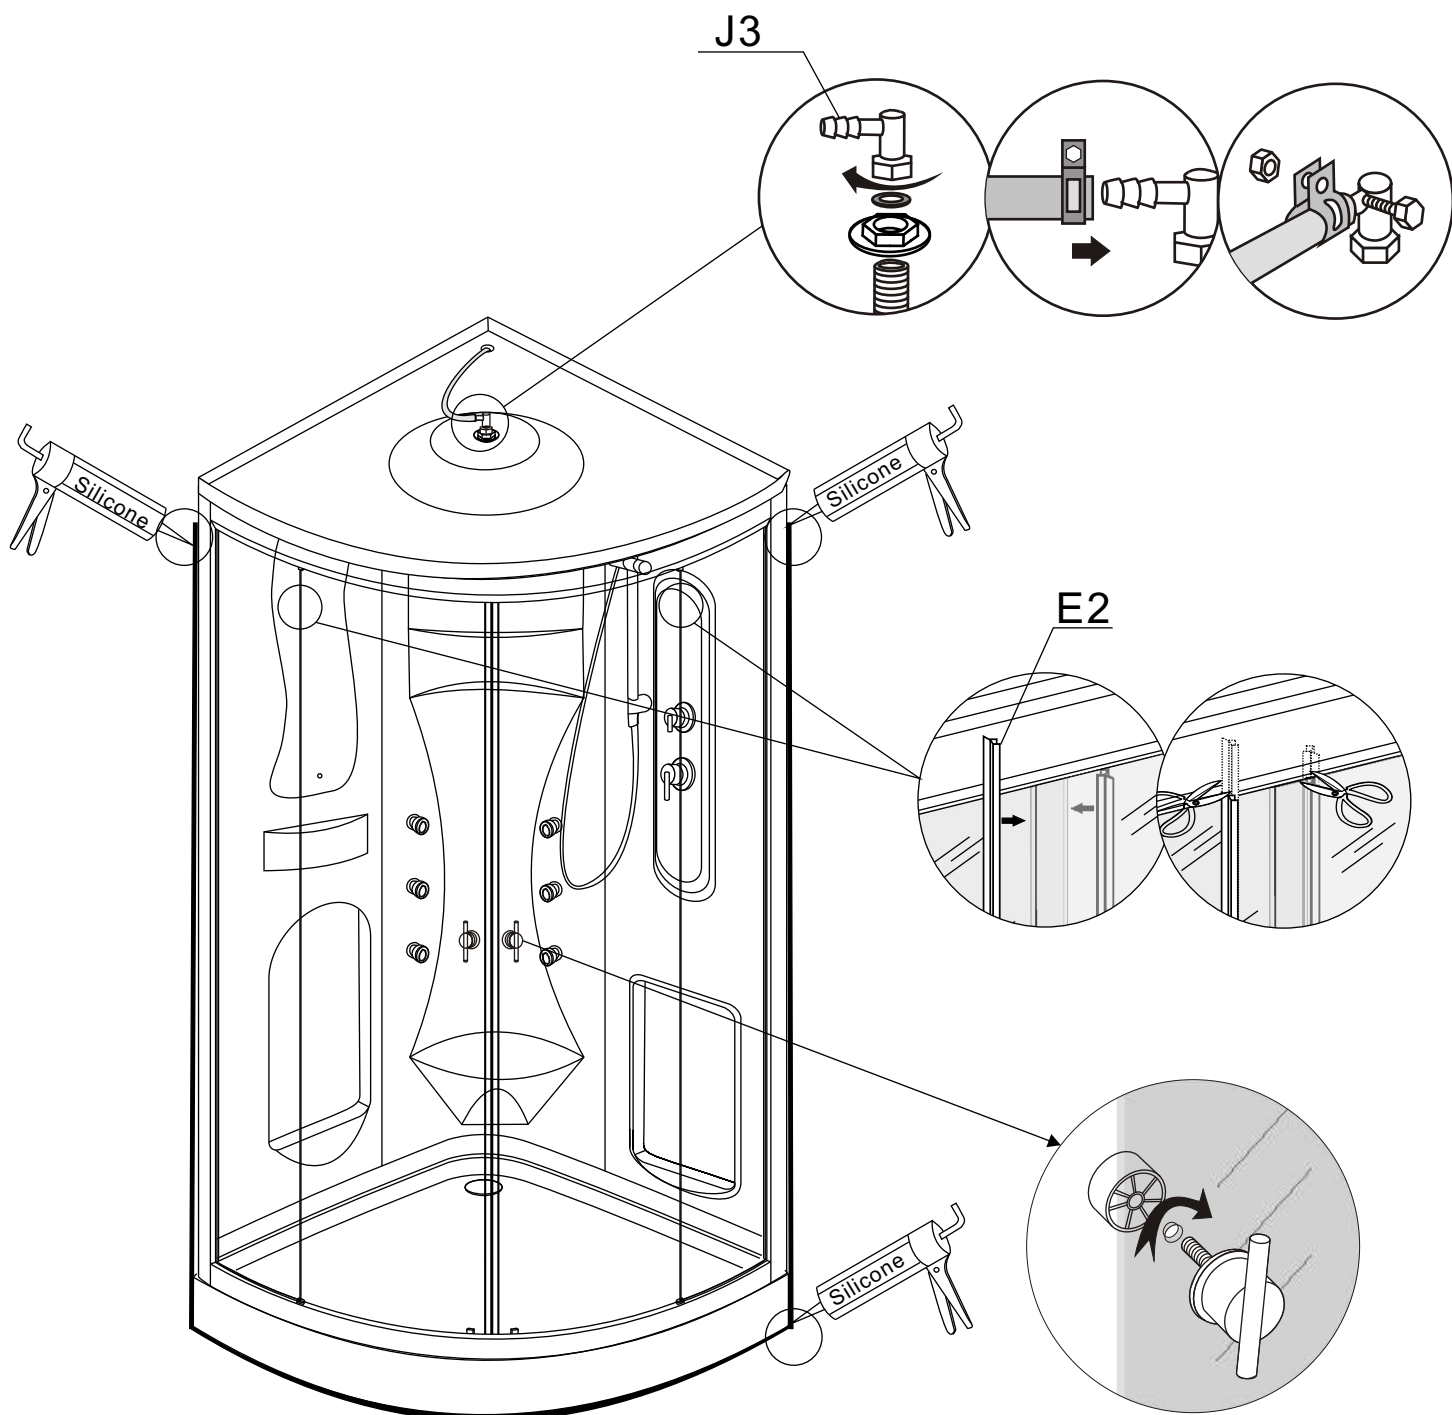

Apply Sanitary Silicone Only.as Shown Above To The Joints
And Exterior Of The Cabin.do Not Apply Silicone Sealant To The
Inside Of The Enclosure.

S-137

Installation instructions

